

A2001 - Adjusting BladeToFence

How to adjust the blade to fence value on A2001 autoflow.


- Updated 21/01/2020 to use bladeOffsetFor and Bak**
- Updated 21/01/2020 to use bladeOffsetFor and Bak**

Contents

Comments

The A2001 machine has no SY axis, so the standard mitre length adjustment method (using SY datum) does not apply

The bladeToFence adjustment is managed using the profile screen for each individual profile:

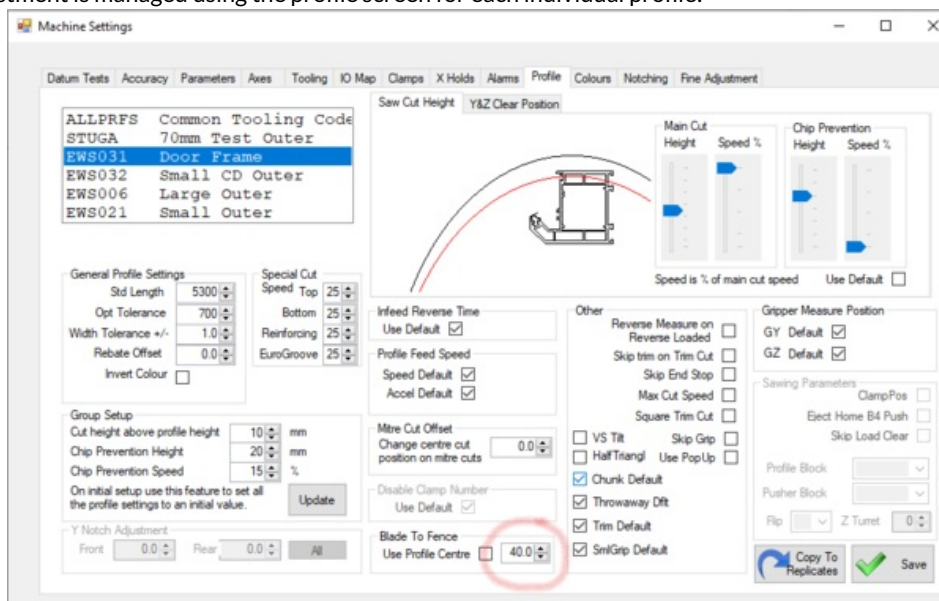

Untick "Use Profile Centre" and adjust the value zero. This makes the software use bladeOffsetFor and bladeOffsetBak as the offset parameters

! ...You need to update Blade To Fence all profiles individually to 0