


ACE PC Re-Flash

How to use a FLASH disk to reFlash the RAM drive in an ACEpc

 Difficulty Easy

 Duration 10 minute(s)

Contents

- Step 1 - Plug in
- Step 2 - Insert Flash Disk
- Step 3 - Power On
- Step 4 - Faulty ACEpc?
- Step 5 - Option 4: Format flash FX drive
- Step 6 - Reboot
- Step 7 - Option 5: Make FlashFx Drive Bootable
- Step 8 - Remove floppy disk!
- Step 9 - Reboot to test
- Comments

 
Step 1 - Plug in

1. Ethernet cable to the network
2. VGA cable to a monitor
3. PS/2 cable to a keyboard



Step 2 - Insert Flash Disk

Make sure the flash disk is the correct way around when inserting.

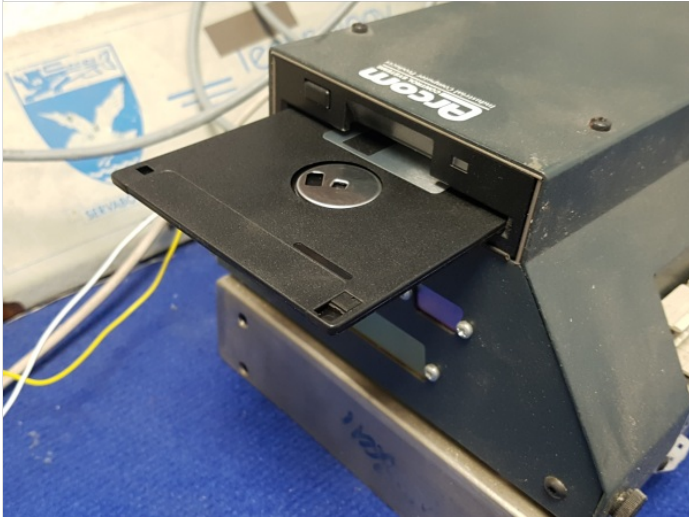

Step 3 - Power On

Using a 24V DC power supply connect the positive and negative rails.






Step 4 - Faulty ACEpc?

If PC fails to power on, load or operate, label the AcePC with the fault, date and your initials. This makes sure the PC is not used again.

Step 5 - Option 4: Format flash FX drive

Enter 4

   Y to continue

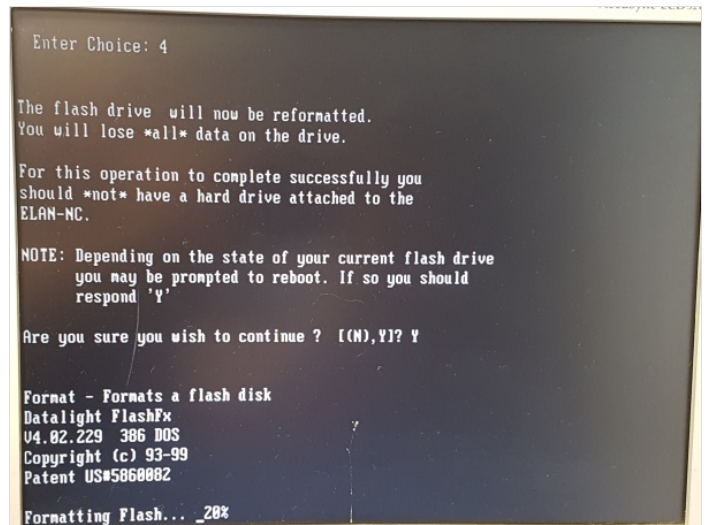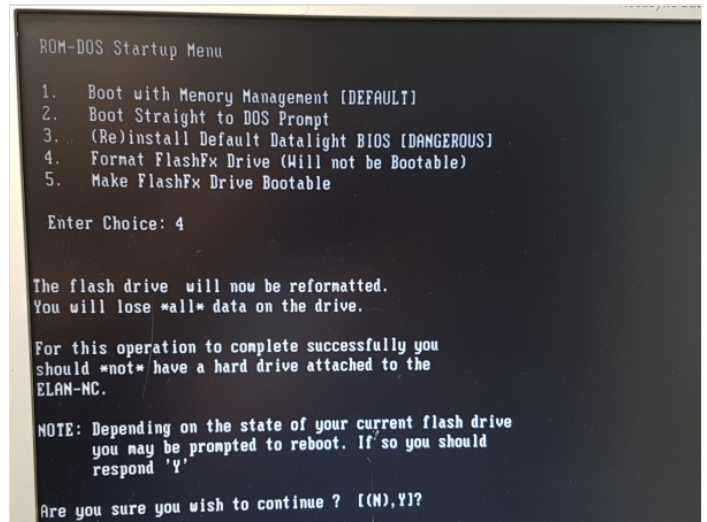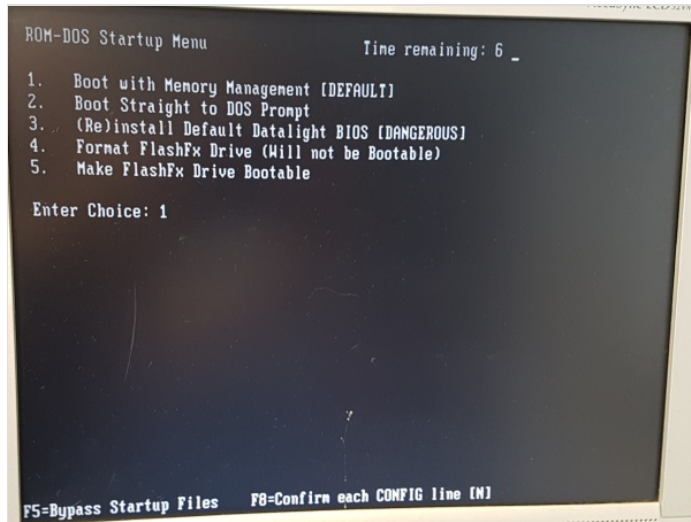



Step 6 - Reboot

ctrl alt del


Step 7 - Option 5: Make FlashFx Drive Bootable

Enter 5

  Y to continue

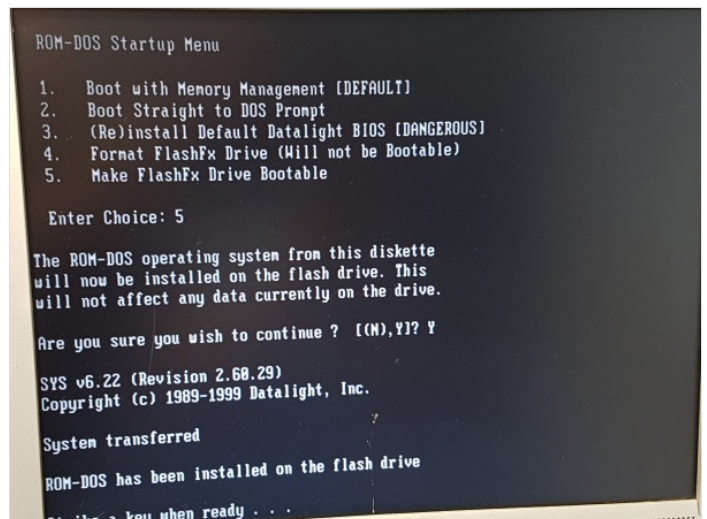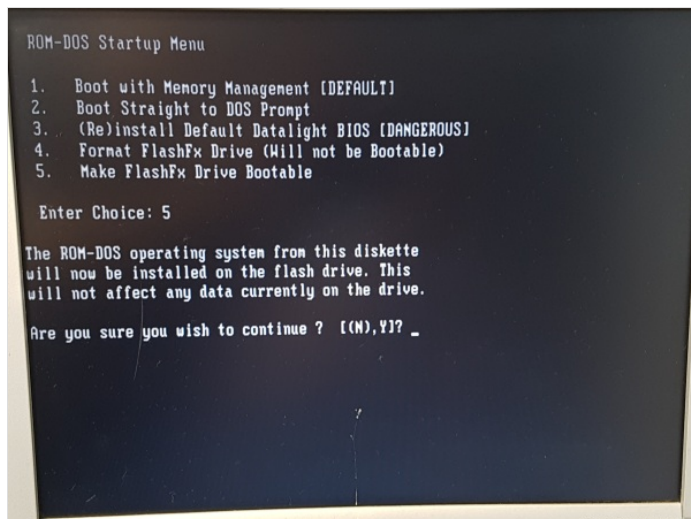

 Step 8 - Remove floppy disk!

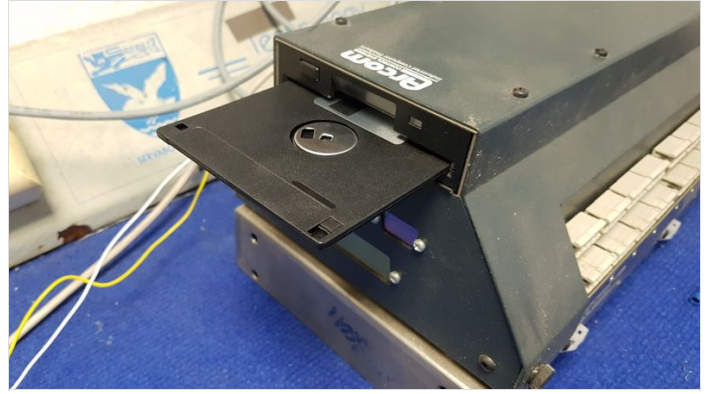

Step 9 - Reboot to test
