

# Changing Main Saw Blade

How to change the main saw blade on a Stuga machine

 Difficulty **Medium**

 Duration **10 minute(s)**

## Contents

Introduction

Items

Step 1 - Stop Cutting

Step 2 - Open the door

Step 3 - Loosen Blade

Step 4 - Remove Fastening

Step 5 - Remove Blade

Step 6 - Fit New Blade

Step 7 - Refit Bolt, Plate and Washer

Step 8 - Measure new blade thickness (Kerf)

Step 9 - Update kerf Parameter

Step 10 - Close the door

Step 11 - Reset Estop

Comments

## Introduction

Stuga recommends this blade be changed after 1-2 weeks of cutting - symptoms to determine if the blade needs changing:

- Awful cutting sound / smell
- Profile dragging (sizes too short)
- Brown burnt swarf
- Smoke coming out of profile end while cutting



...The 500mm blade is sharp and can be awkward to maneuver out of the saw, please be careful

## Items

 Spanner 24mm

 D0005207 Stuga Flange C Spanner



Use protective  
handwear

Warning of sharp  
objects

Hand injury

## Step 1 - Stop Cutting

Make sure you have stopped cutting and nothing on the machine is moving - press an emergency stop button to ensure this.

---

## Step 2 - Open the door

See the tutorial:

[https://stuga.dokit.app/wiki/Autocut\\_Open\\_Guard\\_Doors](https://stuga.dokit.app/wiki/Autocut_Open_Guard_Doors)

---

## Step 3 - Loosen Blade

Using the saw blade 'C' spanner and the 24mm spanner, loosen and remove the main bolt going through the centre of the saw blade - anti-clockwise to loosen.

---

## Step 4 - Remove Fastening

Once the bolt is loose; remove the bolt, washer and plate.

 ...Remember which order they are in, as this is the order they must go back on.

---

## Step 5 - Remove Blade

Now carefully remove the blade, with this blade being 500mm it will be tight. Ensure you take note of which way the blade spins.

 ...The blade cutting direction at the top is towards the rear of the machine

---

## Step 6 - Fit New Blade

Fit the new blade ensuring the teeth are facing the same way it was removed

---

## Step 7 - Refit Bolt, Plate and Washer

Now fit the plate, washer and bolt ensuring it's tight

---

## Step 8 - Measure new blade thickness (Kerf)

Measure the thickness of the brand new or sharpened blade - this should be between 3.8mm - 4.1mm

---

## Step 9 - Update kerf Parameter

Through the winSaw software go into '[F5] Settings' and update the 'Kerf' parameter to what the blade thickness is. Press 'Save'.

---

## Step 10 - Close the door

Press '[F10] Reset Saw', now close the main door and ensure it will not open and that the 'Guard' message clears

---

## Step 11 - Reset Estop

Reset the emergency stop circuit by unlatching emergency stop buttons and pressing the physical blue 'ES RESET' button

---