

How to Calculate a Scaling Factor

Correct formula for recalibrating an axis through the scaling factor

Contents

Comments

New Scaling factor = Old Scaling Factor * Actual Distance / Requested Distance