IP Camera Viewer exe Setup

Setting up the freeware 4 camera viewer system IP Camera Viewer.exe for simple multiple camera views on a machine

Difficulty Easy

Duration 10 minute(s)

Contents

Introduction Step 1 - Install IP Camera Viewer.exe Step 2 - Choose camera layout Step 3 - Add the cameras

Comments

Introduction

It is useful to be able to see a quick view of all cameras on a machine at once. A freeware program is available to do this IP Camera Viewer.exe

Ensure you have the IP address of the cameras to hand, and that the cameras are active and setup to Hikvision Camera Setup. The cameras should have a fixed IP address

Step 1 - Install IP Camera Viewer.exe

Upgrade if necessary

Step 2 - Choose camera layout

Choose the 4 screen layout



Step 3 - Add the cameras

- 1. IP Address
- 2. Username is admin / Password is the Stuga standard
- 3. Camera type is Hikvision
- 4. Model should be DS-2CD2012-I (may change as model is updated)
- 5. test the connection
- 6. Name the camera with the build number and the view you can see



D IP Camera	Webcam			
	U webcam			
amera settings			-	
Cameras Found	No auto discoverable camera found.		2	
If you know the camera d	etails then configure its settings:			
IP address:	192.168.176.90			
Port:	80 R	TSP Port: 554	1	THAT IN MAN
Camera requires auth	entication:	am using ONVIF login		
User name:	admin			A STATEMENT
Password:				Camera properties
		Test Connection	5	
Brand:	Hikvision	~	N	ly IP Camera is not listed
Model:	DS-2CD2012-I	~		
Camera preview options	optional):			
Video resolution:	Camera Default	~	(i)	
Display name:	6 Z109			
Rotate video by:	180 🗘 degrees			
Smart fit camera	in window			