


Label Applicator Stop Settings

Stop Settings for the Auto Label Applicator


Contents

Comments

The auto labeller has a 6 stop Somatec turret stop to allow label position adjustment per profile. The setting for the profile is accessed via Machine Settings->Profile->Other->Auto Labeller Position

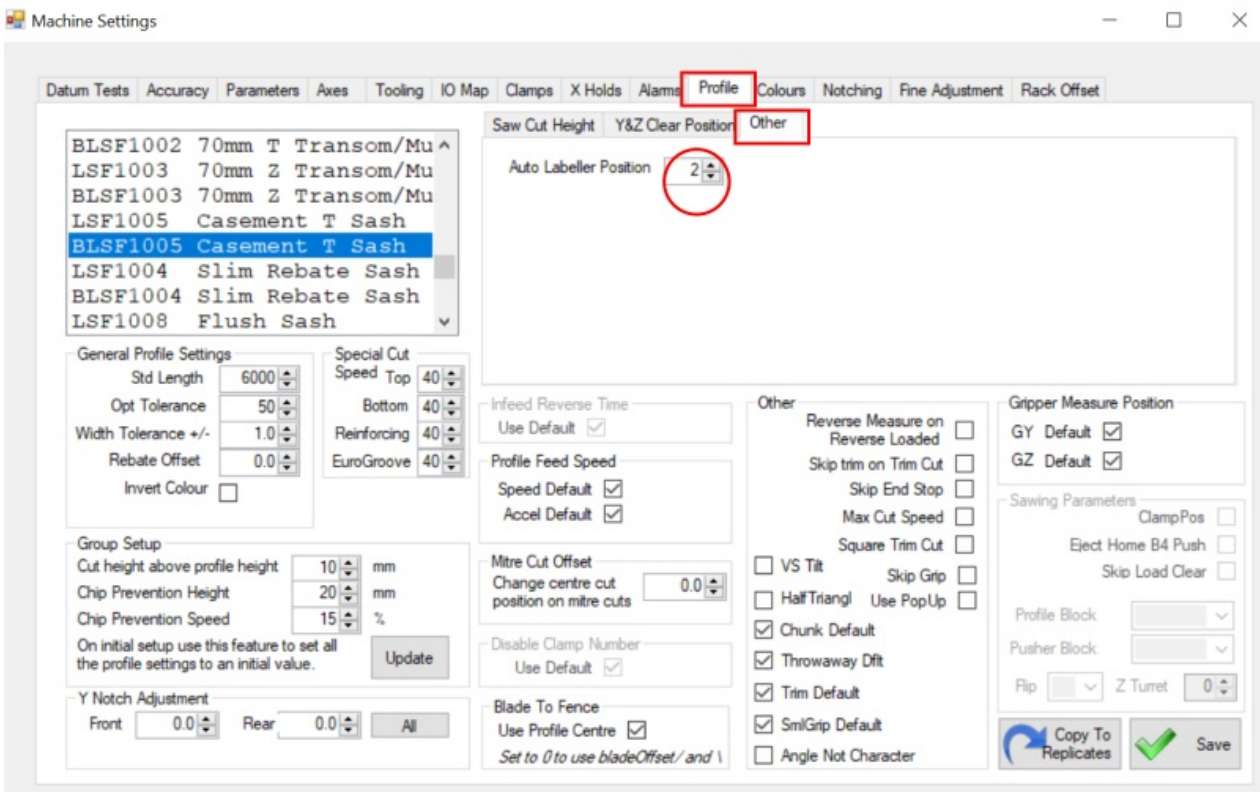

Default Settings

Profile Types	Setting	A2027 Specific Profile
All Outer frames	1	
All normally rebated profiles (eg Ts Zs and Sash)	2	
Odd profile-specific settings	3	 LSF1004

	4	 LSF1007
--	---	---