

# R0019254 Upgrade Gripper Slide - Greased

---

Fitting and return instructions for gripper with greasing points and seals

## Contents

Contents

Fitting

Parts Return

Comments

## Contents

Kit is for one side of the machine

- Replacement Arm
- 2 off B0000034 Bearings
- 2 off B0000234 Grease Nipple
- 2 off D0015084 replacement shafts
- 4 off B0001231 Bearing Seals

Will be supplied assembled

## Fitting

Disconnect scissor arms

Remove top of gripper assembly

Remove old gripper arm and move the nose to new gripper arm

Replace shafts

Rebuild scissor arms

Replace gripper top

Lubricate and ensure it is working smoothly

## Parts Return

Mark the original gripper arm with the machine build number

Return to Stuga HQ for rework