


# Troubleshoot - Permanent IP Addresses - UVision Cameras

How to change the IP address on the obsolete UVision camera systems.

 Difficulty Easy


 Duration 5 minute(s)

## Contents

- Step 1 -
- Step 2 -
- Step 3 -
- Comments

## Step 1 -

Using any Stuga PC on the same network as the target machines, search for the program **CameraSetup.exe**.

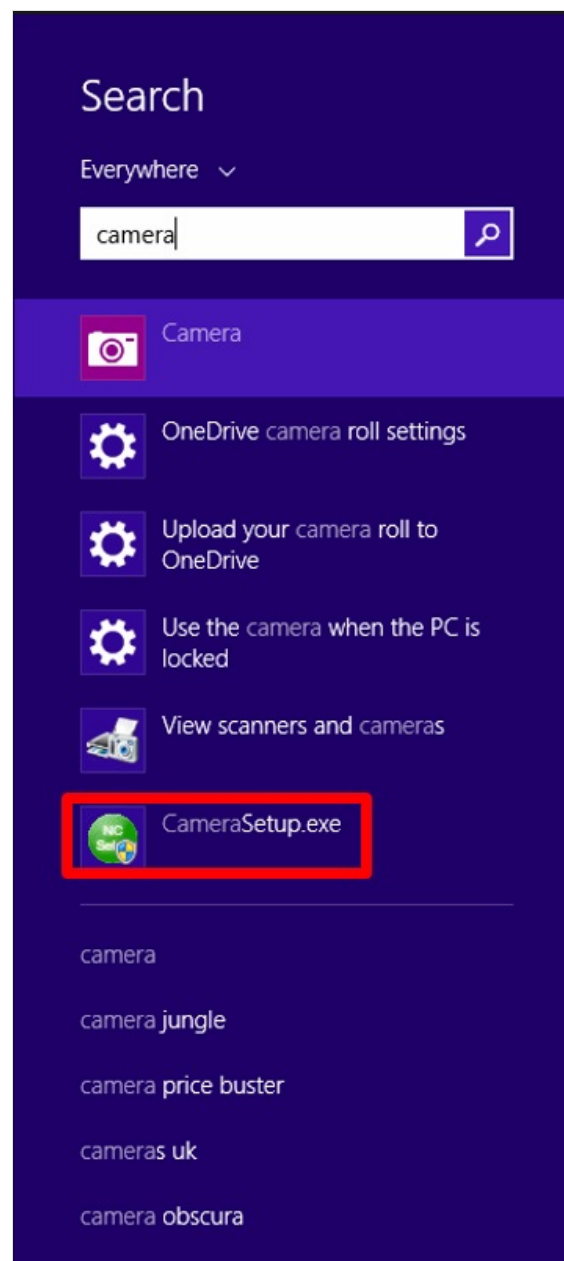


## Step 2 -

When the CameraSetup program is loaded it will show all cameras connected on the network. Select one of these and click **Setup**. This will prompt for a username and password.

Username: **admin**

Password: **admin**

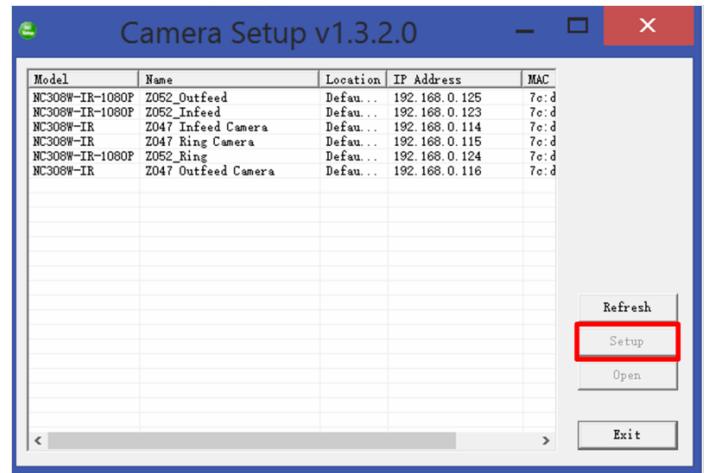

## Step 3 -

Input the desired IP Address, Subnet Mask, Default Gateway, Preferred and Alternate DNS Servers.

