Convert TC2 Project to TC3

How to convert a TwinCAT2 project on an older Autoflow to TwinCAT3. This needs to be done when updating to Windows 10

Difficulty Hard

Duration 2 hour(s)

Contents

Introduction

- Step 1 Get connected to the Camera PC of the machine to be updated
- Step 2 Get a backup of the original TSM file
- Step 3 Get copy of current PLC and Reset project

Step 4 - Convert the TC2 project to TC3

- Step 5 Create the clone to pull the latest tc3Multi and PLC_Reset
- Step 6 Replace the old PLC code with the version control latest
- Step 7 Connect to the Beckhoff Backend PC
- Step 8 Update the EtherCAT Device Adaptor
- Step 9 Add the IO Links
- Step 10 Change the inverterGoFwd links
- Step 11 Copy the Axis Links
- Step 12 Remove the "Interpolate" Axis group
- Step 13 Change V and W axis PLC links
- Step 14 Add the reset link
- Step 15 Ensure the front end has the latest software versions
- Step 16 Update the front end parameters
- Step 17 Update the Control Systems log

Comments

Introduction

The Beckhoff system provides a system for upgrading to TC3 from a TC2 project. This tutorial goes through the steps required to ensure the links and setup of the original TC2 project are copied through to TC3.

Step 1 - Get connected to the Camera PC of the machine to be updated

You will need to get a backup of the TC2 project from this machine, and use it to set up all the correct IO links in the TC3 project

...If you do not have access to the original camera PC, you will need to get hold of an old PC (normally windows 7 or windows 8 PCs) with TwinCAT2 installed on it, and use this to connect to the Beckhoff PLC using "Open From Target". There are a number of old
 "CNC" Pcs in the setup room that can be used for this

Step 2 - Get a backup of the original TSM file

- 1. Dial in to Camera / VM PC
- 2. Open System manager
- 3. File->Save As
- 4. Rename it to [build number].[todays date]
- 5. Copy to c:\twinCAT\stuga\ on the "New" camera PC



es	Name ^	Date modified	Туре	Size
юр	A2005 v2.1.tsm	13/09/2013 14:56	TSM File	1,159 KB
loads	A2005 v2.1.tsm.bak	13/09/2013 14:32	BAK File	1,159 KB
nt Places	A2005 v2.tsm	10/09/2013 14:29	TSM File	1, 159 KB
	A2005 v2.tsm.bak	04/09/2013 14:21	BAK File	1,159 KB
ments	A2008 v1.tsm	20/02/2014 12:37	TSM File	1,179 KB
	A2009 from A2008.tsm	31/03/2014 15:53	TSM File	1, 180 KB
es	A2009 from A2008.tsm.bak	31/03/2014 15:46	BAK File	1,180 KB
s	A2009 Infeed Only v1.tsm	26/03/2014 14:17	TSM File	763 KB
	A2009 Infeed Only v1.tsm.bak	26/03/2014 14:17	BAK File	763 KB
er (C.)	A2009 Infeed Only v2.tsm	26/03/2014 16:46	TSM File	763 KB
ows (C:)	A2009 Infeed Only v3.tsm	01/04/2014 12:24	TSM File	527 KB
k	A2009 Infeed Only v3.tsm.bak	31/03/2014 15:40	BAK File	527 KB
ЭC	A2009 v1 GG.tsm	19/04/2018 17:54	TSM File	1, 198 KB
9C	A2009 v1.2020.06.11.tsm	11/06/2020 14:53	TSM File	1, 198 KB
8CUSUFNT2	A2009 v1.tsm	05/02/2019 13:18	TSM File	1,198 KB

Step 3 - Get copy of current PLC and Reset project

- 1. Open the PLC Control program on the camera PC
- 2. Note the version of software currently running (.pro)
- 3. Find the .pro file in c:\TwinCAT\Stuga\
- 4. Copy to c:\twinCAT\stuga\ on the "New" camera PC
- 5. Also copy the latest PLC Reset project

 ...If the camera PC is not available, you can lookup the last installed version from the Control Systems Log and find the version backup from G:\Design\TwinCAT\Previous Versions

TwinCAT PLC Control - Autoflow v2.414.pro [Action Start	TwinCAT PLC Control - Autoflow v2.114.pro [Action Start_Docking_Hove (ST) - 🗙 👔 Home 🍧 Articles x 🖵 View x 🖓 Comput					
Kile Edit Project Insert Extras Online Window Help	Actions · Se view · C Commo	🕒 🕞 - Comp.	ter • Windows (C:) • TwinCAT • stuga		- 🖽	Search stuga 😥
		Organize 👻 📄 Open	Burn New folder			8# • 🖬 🛛
POUs 0002 (* mox B - Axes Control 0003 arzNov C - Functions 0005 arzNov H - B IsAvis Stopped (FUN) 0006 Execut Axes _ Control (FRG) 0006 arzNov - B Axes _ Control (FRG) 0006 Execut - G Axes _ Dever (FRG) 0006 arzNov - G Moxe _ Asso _ Dever (FRG) 0006 arzNov - G Moxe _ Asso _ Dever (FRG) 0005 arzNov - G Moxe _ Asso _ Dever (FRG) 0005 arzNov - G Moxe _ Asso _ Dever (FRG) 0005 arzNov - G Moxe _ Asso _ Dever (FRG) 0005 arzNov - G Moxe _ Asso _ Dever (FRG) 0005 arzNov - G Moxe _ Asso _ Dever (FRG) 0015 arzNov - G Moxe _ Horing (FRG) 0016 arzNov - G Moxe _ Asso _ Dover (FB) 0016 arzNov - G Moxe _ Asso _ Dover (FB) 0016 arzNov - G Moxe _ Dover (FB) 0016 arzNov - G Moxe _ Dover (FB) 0016 arzNov - M aranhwatati.inke (FBQ) assov <th><pre>re x axis to docking position *) veKbe(AxGX).Fostion *: fParameter[ph_GXSTOPCYLINDERTOZERO]</pre></th> <th>Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places RecentPl</th> <th>New - Inter -</th> <th>Date modified T QU/07/04132-00 R QU/07/04132-00 R QU/07/04132-00 R QU/07/04132-00 R QU/07/04142-01 R QU/07/04142-01 R QU/07/0414-02 R</th> <th>op/ Dire I/Ne L_211 % I/Ne L_211 % I/Ne S96 % I/Ne S96 % I/Ne Dire I/Ne Dire I/Ne L/28 % I/Ne L/28 %</th> <th>د ب ب</th>	<pre>re x axis to docking position *) veKbe(AxGX).Fostion *: fParameter[ph_GXSTOPCYLINDERTOZERO]</pre>	Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places Recent Places RecentPl	New - Inter -	Date modified T QU/07/04132-00 R QU/07/04132-00 R QU/07/04132-00 R QU/07/04132-00 R QU/07/04142-01 R QU/07/04142-01 R QU/07/0414-02 R	op/ Dire I/Ne L_211 % I/Ne L_211 % I/Ne S96 % I/Ne S96 % I/Ne Dire I/Ne Dire I/Ne L/28 % I/Ne L/28 %	د ب ب

Step 4 - Convert the TC2 project to TC3

- 1. Open Visual Studio
- 2. Create a new TC3 project called [BuildNo] in c:\TwinCAT\Stuga\
- 3. Make sure "Create Directory..." is Unticked
- 4. Right Click on the project name and select 'Load Project from TwinCAT 2.11 Version...'
- 5. Click Cancel on the two windows asking to convert the PLC project
- 6. Ignore or cancel any warnings about libraries (this part will be replaced later)

...Once created, you will have a copy of all the devices and boxes in the project with the correct naming.



Step 5 - Create the clone to pull the latest tc3Multi and PLC_Reset

- Create the clone in c:\TwinCAT\[BuildNo]\Source
- If an error is produced after cloning, just use the "Add" function to add the clone

Step 6 - Replace the old PLC code with the version control latest

- 1. Delete the old PLC projects
- 2. using Add existing item, add the tc3Multi then PLC_Reset projects from c:\TwinCAT\[BuildNo]\Source.
- 3. Ensure Use Original project Location is selected
- 4. Build the solution to create the instances ready for linking
- 5. Ensure the Port numbers are correct (851=tc3Multi, 852=PLC_Project)

Step 7 - Connect to the Beckhoff Backend PC

Add a new route

Step 8 - Update the EtherCAT Device Adaptor

Navigate to the Adaptor settings and search for the correct one on the new Beckhoff PC

 ...When you converted the TC2 project, it imported all the etherCAT boxes, but critically, it also imported the "EtherCAT Device". This is the hardware spec of the original Beckhoff PC, with a MAC address, etc. You now need to change this in the project to the EtherCAT device on the new Beckhoff PC



ione) Incel Area Connection 3 (TwinCAT-Intel PCI Ethernet Adapter (Gigabit)	OK
CI Bus/Slot 3/0, Slot 7 (0xD0420000)	Cancel
	Unused
	⊖ All

Step 9 - Add the IO Links

O ... This is a LOT easier on a dual screen PC!

...Regrettably, the upgrade will not keep all the IO links, so these need to be entered again manually

Using System Manager on the Camera PC, create new copies of all the links on all devices from the System Manager to the new project.

I...A lot of the Autoflows have been modified on the EtherCAT network - eg a sensor input may have blown and the sensor has been moved to a different port. Using this method ensures you get exactly the same setup.

...Don't miss the links on the "Slices", these are one level down on the IO Device Tree



Step 10 - Change the inverterGoFwd links

TC2 software used a system of inverter objects to control the spindles, saw blade and extractor. The mapping will show InverterGoFwd mapping.

These need to be changed to the correct output numbers for the outputs in question. On an Autoflow, these are Slice MC03B (ModuleB) Ch0 - Y62 Spindle Inverter

Slice MC2F (module F) Ch1 - Y97 Saw Blade Ch2 - Y98 Extractor

Step 11 - Copy the Axis Links

The PLC links will be missing - reinstate them as per System Manager on old Camera PC

If The 'Link to PLC' field is not viewable on Twincat 2 project use the below guide for the correct links required: Naming Convention for Axis Drives

Step 12 - Remove the "Interpolate" Axis group

Right click and select delete





Step 13 - Change V and W axis PLC links

When converting for a ZX4 machine, the V and W axis links will need to be changed

V = arrAxis[11] W = arrAxis[12]

Image: Image:

Step 14 - Add the reset link

Set a link from ibResetPLC on PLC_Reset to qbResetPLC on tc3Multi



Step 15 - Ensure the front end has the latest software versions

Step 16 - Update the front end parameters

In params.saw, the following parameters must be updated controllerType=5 amsnetId= [AmsNetId of the new Beckhoff PC] twinCAT Address=[AmsNetId of the new Beckhoff PC] AllWasteAtStart=1 useSawForYNotch=1

Step 17 - Update the Control Systems log

Update

- Front End PC and OS
- Back End PC and OS
- Software versions